




Installation instructions for prefabricated wood deck

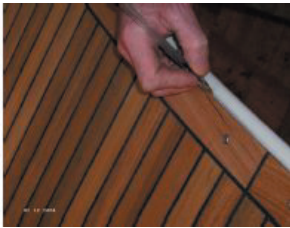

1.) Place the prefabricated wooden deck pads in the intended locations.

2.) Tear the outlines with a fine pencil all around.



3.) Remove the deck pads and sand the surface with sandpaper grit size 80 to approx. 5mm to the crack. If the substrate (glass fiber plastic, plywood, metal) is not sanded, the surface adhesive (e.g., Sikaflex 291) can not bond. Also grooved or grained glass fiber plastic must be sanded.



4.) Thoroughly remove the sanding dust with a clean cloth and also clean the undersides of the pads.



5.) To prevent contaminating adhesive from sticking to your visible surfaces during the bonding, we recommend to mask these surfaces with crepe adhesive tape on the outside of the crack.



6.) Now apply the surface adhesive with a toothed spatula (tooth height approx. 1mm) over the entire surface and to the undersides of the prefabricated wooden deck pads.



7.) Place the pads on the adhesive panel and apply pressure all over (for example, through sandbags, bricks, screw clamps, screws, etc.). To ensure that the pads do not slip during the gluing process (about 12 hours), we recommend fixing them with screws. The resulting screw holes can then be closed with plugs.

8.) Remove the tape.

9.) After the gluing process, you can use a carpet knife to cut off the protruding adhesive residues on the edge.